


LANDCRUISER 70 SERIES - FRONT 6 POT INSTRUCTIONS

- 1 BEFORE STARTING, USE THE WHEEL CLEARANCE TEMPLATE TO MAKE SURE YOUR WHEEL HAS ENOUGH CLEARANCE FOR THE 6 POT CALIPERS. WHEELS MUST BE 17 INCH OR LARGER DEPENDING ON THE OFFSET.

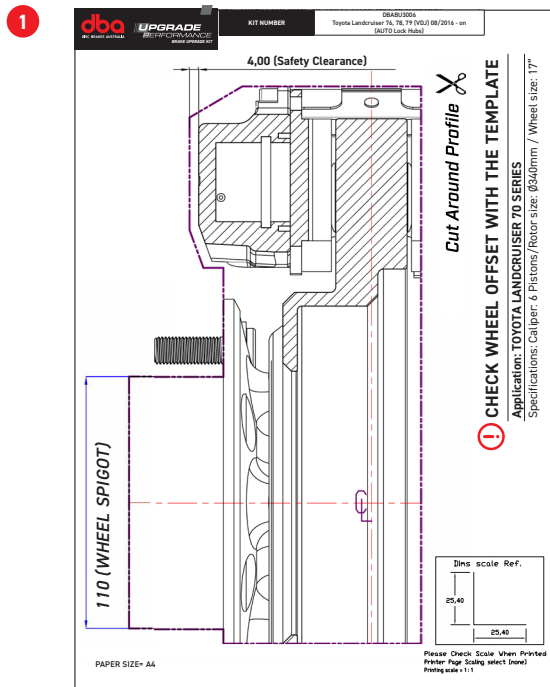

- 2 REMOVE OE CALIPERS AND ROTORS
- 3 ROTOR BACKING PLATE WILL NEED TO BE BENT ABOVE AND BELOW THE CALIPER TO ALLOW IT TO FIT.

